Instructions for COAST HP7R Rechargeable Flashlight

BATTERY INSTALLATION: The HP7R features our Flex Charge Dual Power recharging system and can be powered by rechargeable battery pack or standard AAA alkaline batteries. The HP7R includes two Lithium Ion rechargeable battery packs and one alkaline battery cartridge with 4 AAA alkaline batteries. To install the rechargeable battery pack, unscrew (counter clockwise) and remove the tail cap of the light and place the rechargeable battery pack into the light in the direction indicated by the arrow on the battery pack; arrow towards the front of the light. To operate the light with alkaline batteries, install 4 AAA alkaline batteries into the alkaline battery cartridge in the direction indicated on the cartridge. The alkaline battery cartridge is installed into the flashlight in the direction indicated by the arrow on the battery pack; arrow towards the front of the light. Replace the tail cap and tighten (clockwise).

CHARGING: Your HP7R is equipped with our exclusive PRO TEK Charging Port. To expose the charging port, grasp the tail cap of the light, turn counter clock wise about $1/8^{th}$ of a turn and then pull the tail cap back (away from the body of the light). To charge your HP7R, simply plug the included mini USB cable into the charging port on the flashlight. When the charging cable is inserted, the charging indication light near the charging port will glow. Red indicates the light is charging; Green indicates the light is fully charged. You can also charge the rechargeable battery pack outside of the light by plugging directly into the charging port on the battery pack. The rechargeable battery pack also features a charging indication light. The HP7R can be charged using AC, DC or USB power. To use the AC or DC adaptor, plug the USB connector into the desired power adaptor. To charge using USB, simply plug directly into a USB port. Prior to first use, charge the rechargeable battery pack, inside or outside the light, until the charging indicator light turns GREEN. The HP7R features overcharge protection and it is not necessary to disconnect from power when fully charged. For added protection, the charging system will not work when the alkaline battery cartridge is installed inside the flashlight. **CAUTION:** Use only the proprietary rechargeable battery pack that is included in your HP7R or standard AAA alkaline batteries. Do not dispose of in fire or short circuit the battery.

QUICK CYCLE SWITCH ACTIVATION: This flashlight is equipped with COAST's Quick Cycle Switch™, featuring high, strobe and low beams. To activate the high beam from the off position, press the on/off switch until it clicks once, then release. Press the on/off switch until it clicks a second time to turn off the light. To activate the strobe mode press the on/off switch until it clicks a third time, then release. Press the on/off switch until it clicks a fourth time to turn off the light. To activate the low mode, press the on/off switch a fifth time until it clicks. Press the on/off switch until it clicks a sixth time to turn off the light. The light can also be operated in "momentary" mode. Momentary mode is activated by partially depressing the on/off switch (less pressure than required for a full click). The momentary switch will cycle the light through the high, strobe and low beam modes. Any time the light is turned off for more than five seconds, the high/ low cycle will reset and the high beam will be activated when the light is turned on again.

LONG RANGE FOCUSING OPTIC with FINGERTIP SPEED-FOCUS CONTROL™: This flashlight is equipped with COAST'S Long Range Focusing Optic with FINGERTIP SPEED-FOCUS CONTROL™ that allows the user to choose between a broad flood beam and a tight spot beam for long distance illumination. To adjust the beam into the tight spot beam mode, slide the head of the light all the way forward. To adjust the beam into the broad, flood light mode, slide the head of the flashlight back. The beam can be locked into any position, from full flood beam to spot beam. To lock the beam in position, turn the head of the light to the left. To unlock the beam position, turn the head of light to the right.

BELT and WALL MOUNT SWIVEL CLIP USE: Two swivel clips are included with your new HP7R; a wall mount and a belt clip. To use the belt clip simply attach the clip to your belt with the flashlight retaining clips facing out and then snap the light in place. The position of the light can be adjusted by turning the light in the desired direction. The wall mount includes mounting screws and can also be adjusted to position the light in the desired direction. A cable retaining clip is built into the wall mount to position the charging cable as desired.

MAINTENANCE: Wipe the external body with a damp cloth. Do not submerge. The rechargeable battery pack can be re-charged up to 500 times before a noticeable decline in performance. To purchase replacement accessories, contact your COAST dealer or call our customer service line at 800.426.5858 for assistance.

- Rechargeable Lithium Ion Battery Pack: Item number 19704
- Battery cartridge for AAA alkaline batteries: Item number 19726
- USB Charging Cable: Item number 19702
- AC adaptor for U.S. wall plug: Item number 19699
- DC adaptor for 12V outlet: Item number 19700

WARRANTY POLICY: Coast Products guarantees this product to be free of defects in materials and workmanship for the life of the original purchaser. This guarantee does not cover normal wear and tear, nor damage resulting from misuse or neglect. If this product is defective, return it to us for a repair or replacement, along with a check for \$5.00 shipping and handling. Guarantee does not include batteries.

In USA: COAST Warranty 8033 NE Holman Street Portland, OR USA 97218 800.426.5858